

<Updating Procedure>

Be sure to use fully charged battery. If the camera turns off during updating due to lack of battery power, the camera or lens will become inoperable. If this happens, a charge will be made for repairs even if within the warranty period.


You cannot return a lens to its previous firmware version after updating it.

[1] With turn OFF the camera, insert SD/SDHC card (containing Firmware file) into the camera.

[2] Turn ON the camera.

[3] Press MENU button to display MENU screen

[4] Press the four-way controller right to display [Set-up 3] menu screen.

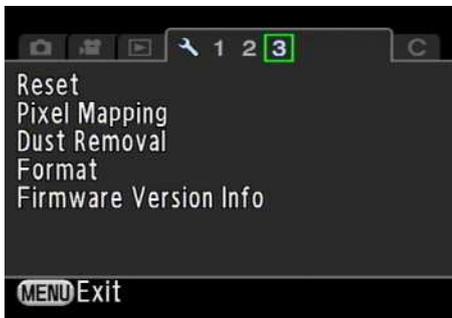

[5] Select [Firmware Version Info] in the [Set-up 3] menu.



[6] Press the four-way controller right to display [Firmware Version Info].

The firmware version for camera and lens are displayed on the [Firmware Version Info] screen.



Example: Attaching 01 STANDARD PRIME LENS


[7] Press the four-way controller right to display update screen.

Press the four-way controller up to select [Start] and press OK button.



*If firmware file is not saved to SD/SDHC card correctly, this screen will not be displayed.

[8] Card access lamp will be blinked and display will be changed from [NOW LOADING] to [COMPLETE].

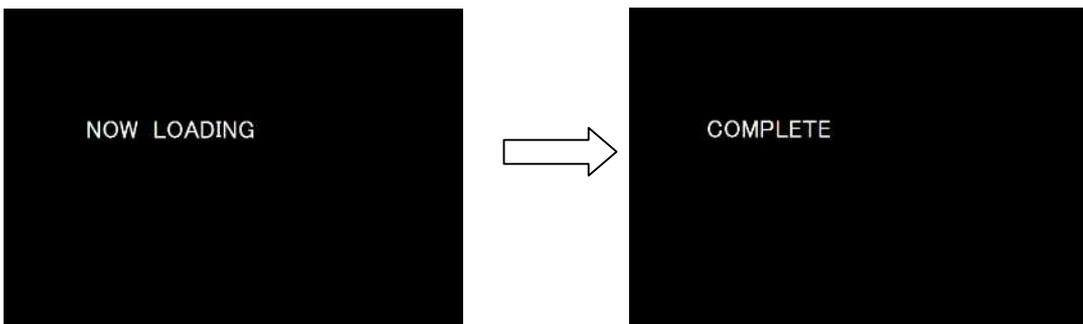

***[Caution] Do not turn OFF the camera while updating.**

Do not touch the lens unlock button while updating.

[9] Automatically turn OFF the camera. (Approx. 5 second)

[10] Remove the SD/SDHC card from camera.

*Confirm the version of firmware with above step [2] to [6].

[Caution]

When updating is finished, the update SD/SDHC card still contains the Firmware file.

If you want to use this card to take pictures, format the card by the camera to delete firmware file first.