 
 
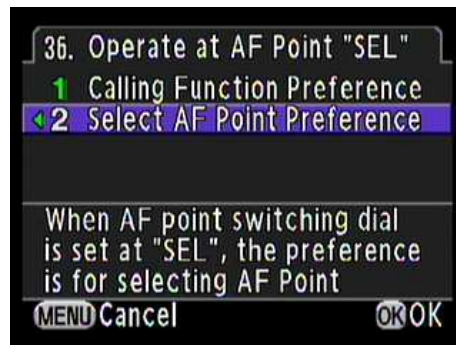 


[How to operate additional function]

[36. Operate at AF Point "SEL"] is newly added on [Custom] menu.

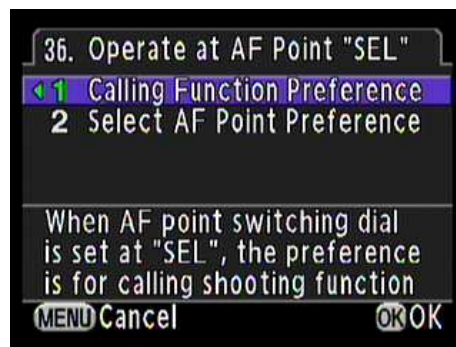

*Select [36. Operate at AF Point "SEL"] and press four-way controller right then select either [1 Calling Function Preference] or [2 Select AF Point Preference]. Press OK for setting. [1 Calling Function Preference] is default setting.

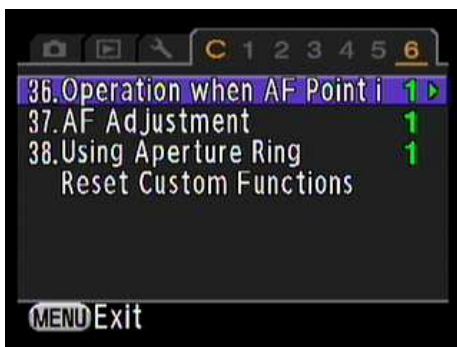

When selected [1 Calling Function Preference] and AF point switching dial is set at [SEL], Calling Function can be operated priority by the four-way controller. (To switching the four-way controller to Selection AF point, press OK button.)

When selected [2 Select AF point Preference] and AF point switching dial is set at [SEL], selection of AF point can be operated priority by the four-way controller. (To switching the four-way controller to Calling Function, press OK button.)