

<Updating Procedure>

 
Be sure to use fully charged battery. If the camera turns off during updating due to lack of battery power, the camera or lens will become inoperable. If this happens, a charge will be made for repairs even if within the warranty period.

You cannot return a lens to its previous firmware version after updating it.


[1] With turn OFF the camera, insert SD/SDHC card (containing Firmware file) into the camera.

[2] Turn ON the camera while pressing MENU button.


Following update screen will be displayed.

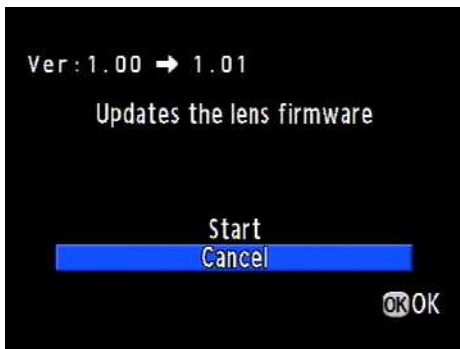

 [3] Press the four-way controller up to select [Start] and press OK button.

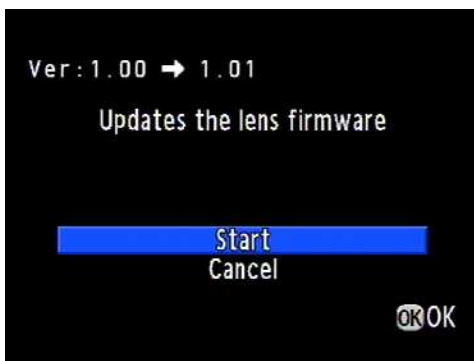

 [4] Card access lamp will be blinked and display will be changed from [NOW LODING] to [COMPLETE].

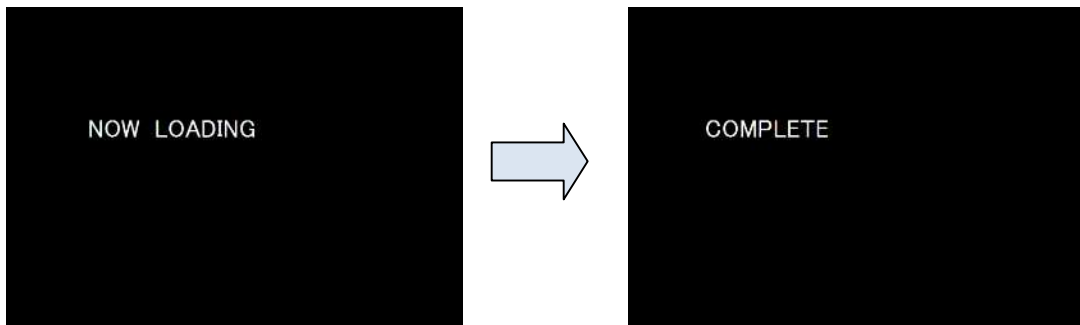


***[Caution] Do not turn OFF the camera while updating.**

Do not touch the lens unlock button while updating.

[5] Automatically turn OFF the camera. (Approx. 5 second)

[6] Remove the SD/SDHC card from camera.

 *Confirm the version of firmware.

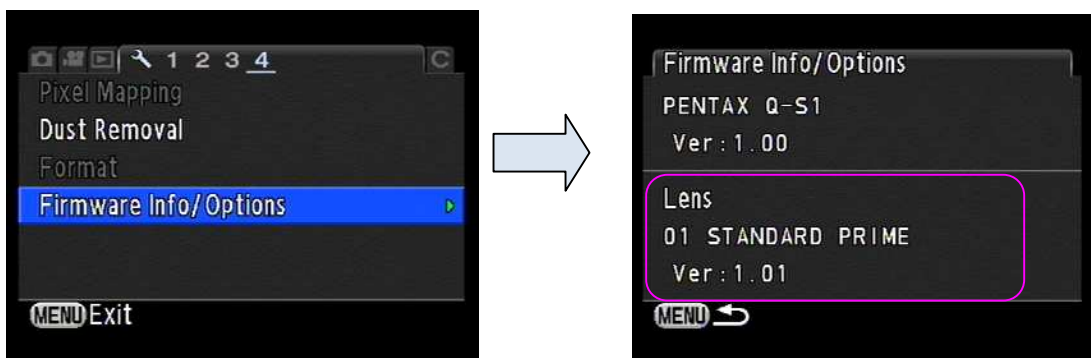

[Caution]

When updating is finished, the update SD/SDHC card still contains the Firmware file.

If you want to use this card to take pictures, format the card by the camera to delete firmware file first.