

# Editing Movies

You can divide a movie into multiple segments and erase unwanted segments from the movie.

**1** Press the  button.

**2** Use the four-way controller ( ) to select a movie to be played back.

The first frame of the movie appears on the monitor.

**3** Press the four-way controller () .



 

The playback mode palette appears.

**4** Use the four-way controller (   ) to select  (Movie Editing) and press the **OK** button.

A screen to edit a movie appears.

**5** Select a point where you want to divide, or select a segment which you want to erase.


**① How to select a point to divide a movie**

 

Use the four-way controller (  ) to select a point where you want to divide, and press the  button at the point to confirm your selection.

\*You can select up to four different points as a dividing point.

\*When you select one or more dividing points, you can switch to a screen to select a segment to be erased.

**② How to select a segment to be erased from a movie**


Press the  button to display the screen to select a segment to be erased.


Use the four-way controller ( ) to select a segment to be erased, and press the **OK** button to confirm or cancel the selection.


\*Press the MENU button to exit the segment selecting operation.




**Function of buttons, keys and dial**


Four-way controller ( ) : Playbacks/pauses a movie.

Four-way controller ( ) : Moves forward one second.  
During pause or playback, moves to the next dividing point.

Four-way controller ( ) : Moves backward one second.  
During pause or playback, moves to the previous dividing point.

Rear e-dial : Adjusts the sound volume. (6 levels)


 (Green) button : Confirms or cancels the selection of a dividing point.

 button : Displays a screen to select a segment to be erased from a movie.

**6** Press the **OK** button.

You will see a confirmation screen asking you if you want to save the divided segments as separate files.



**7** Use the four-way controller ( ) to select [Save as] and press the **OK** button.

The selected movie is divided, and the unwanted segments are erased. Each remaining segment is separately saved as a new file, and then the saved movie is displayed on the monitor.

When you select dividing points, you can select them in chronological order from the beginning to the end of the movie. On the contrary, when you cancel your selections of dividing points, you can cancel each selection in the reverse chronological order from the end to the beginning of the movie. Please note that while selecting a dividing point, you cannot make additional dividing points before and between other dividing points, and cancel your selections of dividing points.

